

## TP70 DIP SWITCHES SETTING : 1 (002/Pulse)

Supported Bill US\$ 1, 5, 10, 20, 50, 100 bills.

Function	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8	SW9	SW10
★ 1 Pulse /US\$ 1	OFF	OFF	OFF							
2 Pulse /US\$ 1	OFF	OFF	ON							
3 Pulse /US\$ 1	OFF	ON	OFF							
4 Pulse /US\$ 1	OFF	ON	ON							
5 Pulse /US\$ 1	ON	OFF	OFF							
10 Pulse /US\$ 1	ON	OFF	ON							
20 Pulse /US\$ 1	ON	ON	OFF							
100 Pulse /US\$ 1	ON	ON	ON							
Fast output pulse Lo= 50ms Hi= 100ms				ON						
★ slow output pulse Lo= 50ms Hi= 300ms				OFF						
Inhibit level Active Low					ON					
★ Inhibit level Active High					OFF					
★ Accept US\$ 1						ON				
Reject US\$ 1						OFF				
★ Accept US\$ 5							ON			
Reject US\$ 5							OFF			
★ Accept US\$ 10								ON		
Reject US\$ 10								OFF		
★ Accept US\$ 20									ON	
Reject US\$ 20									OFF	
★ Accept US\$ 50 & 100										ON
Reject US\$ 50 & 100										OFF

★ Manufacture setting

Note:(1)Please reset the bill acceptor after set the dip switch.

(2)Dip switches 1 to 5 are only used for pulse protocol.

### DIP SWITCHS SETTING : 2

FUNCTION	SW1	SW2	SW3	SW4
★ Pulse Normal High	ON			
Pulse Normal Low	OFF			
★ Pulse Protocol		ON		
ICT Protocol		OFF		
Harness Disable			ON	
★ Harness Enable			OFF	
Ignore Sensor Problem (Note1)				ON
★ Acknowledge Sensor Problem(Note2)				OFF

★ Manufacture setting

Note:(1)Sensor 6 problem occurred = ==>> BA wii be still in working order.

(The face LED will be flashing in short green about 2 seconds everytime you restart BA.)

(2)BA will stop to work when it acknowledges Sensor 6 problem occurred.